



**WAX FREE** LEAK FREE. HASSLE FREE. WORRY-FREE.

# URINAL SEAL

- **Quick, reliable installation** – long-term performance with the added benefit of being reusable during service calls
- Flexible adhesive forms a strong bond with the urinal for a secure fit
- Engineered to seal to the inside of the drain pipe, **forming a watertight, gastight, and odor-tight seal**
- Made of durable, flexible PVC that accommodates slight shifting and resists wear
- Will not absorb moisture or break down over time
- Ideal for new installations and replacements

PART NUMBER	DESCRIPTION	CASE QUANTITY
FUS-2	Wax Free Urinal Seal for 2" Drain Pipe	24



PATENT 8,572,768 | D655, 400S  
D655, 795S | D655, 796S | D649, 625S



**WAX FREE** LEAK FREE. HASSLE FREE. WORRY-FREE.

# URINAL SEAL

**STEP ONE**



### WALL PREPARATION

**NEW:** Install the hanger brackets and the drain connection according to the urinal manufacturer's instructions.  
**REPLACEMENT:** Urinal flange wall adapter must be clean and free from wax or old sealing material.

**STEP TWO**



### PREPARE URINAL

Urinal must be clean, dry, and free from wax or old sealing material.

**STEP THREE**



### INSTALL URINAL SEAL

Insert the Fernco urinal seal into the wall adapter far enough that it will not fall out during urinal installation. Remove white release paper from adhesive.

**STEP FOUR**



### HANG URINAL

Hang the top of the urinal on the hanger brackets, then pivot the urinal down until the seal makes contact with the urinal. Reach behind the urinal and press the adhesive firmly onto the back of the urinal.

**STEP FIVE**



### SECURE URINAL




Tighten the bolts to secure the urinal against movement. **Do not over-tighten or the urinal may break.**

**STEP SIX**



### CHECK FOR LEAKS

Connect water supply and verify the drain connection is leak free.

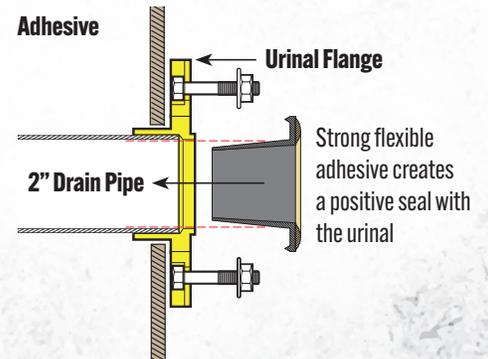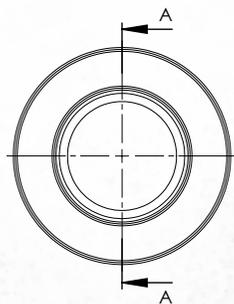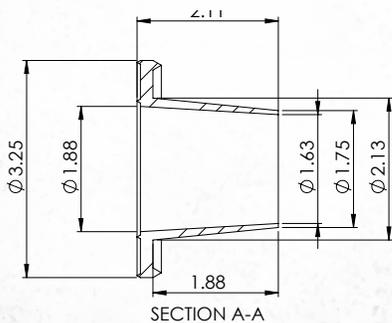

- Conforms to ASTM D 5926 and ASTM A 1045
- Adhesive: Permanent Pressure Sensitive Adhesive